

AUTOMATIC AND PERMANENT BALANCER

ATTENTION!

A wheel without proper balance, has irregular wear, also causes damage to the suspension, bearings and discomfort in driving due to vibration



The automatic and permanent balancer is built with a circular tube filled with metallic spheres and a compound of special oils that spread throughout its perimeter balancing automatically and permanently all the moving tires of the vehicle and adapts itself to wear and tear natural tire.



Install the automatic and permanent balancer now and enjoy all the benefits of savings and comfort !!!

For more information

